



USB to UART

 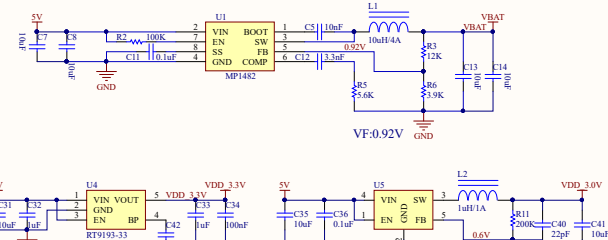


Power

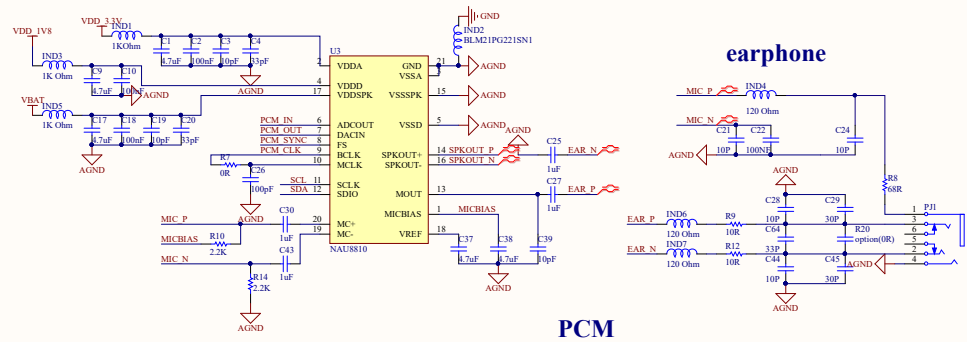


PCM

音频ic需要使用3电源, 否则干扰太大.




Interface


UART JMP

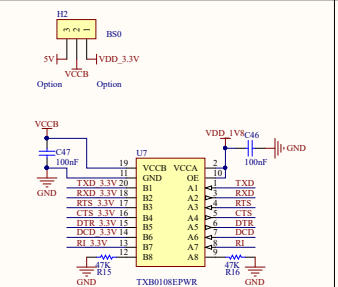


UART

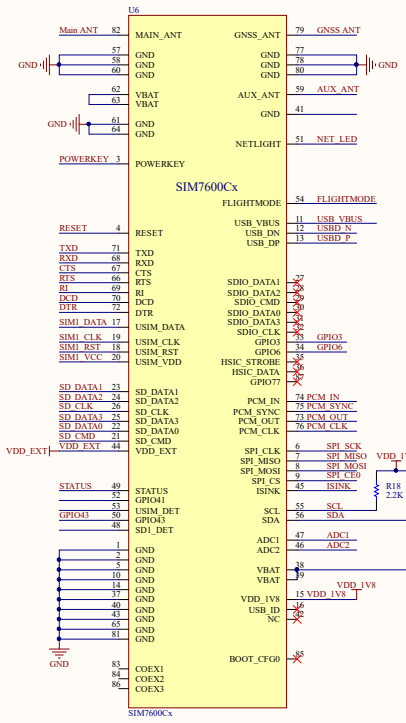

SIM7600Cx

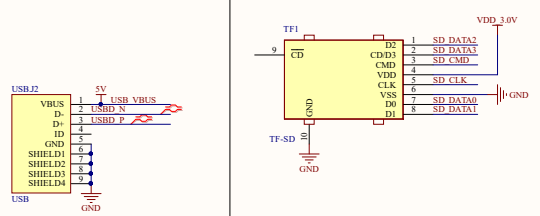

USB

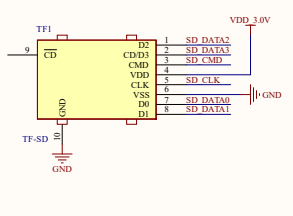


SD\_CARD

Indicator light




NET

PWR

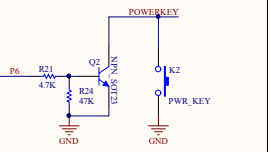


KEY

按下开机

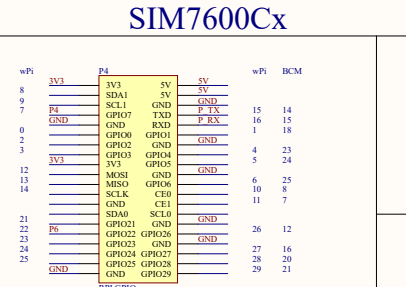


Raspberry Interface


Antenna

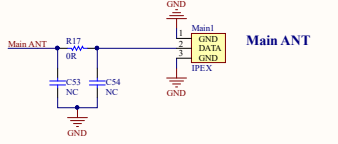


Main ANT

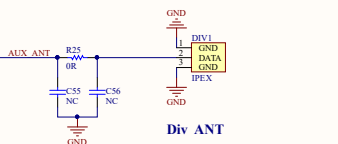


Div ANT

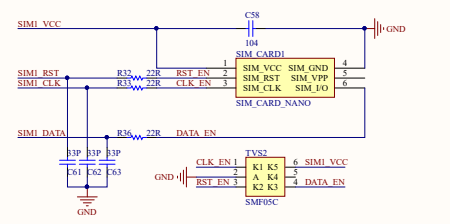

SIM\_CARD

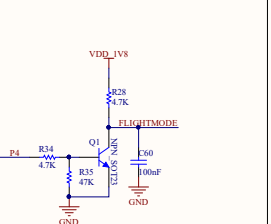

Flight mode

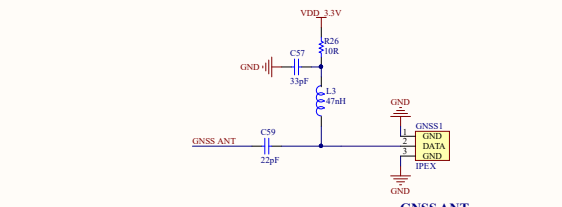

GNS ANT

SIM7600X 4G HAT